



Inateck Scanner Information:

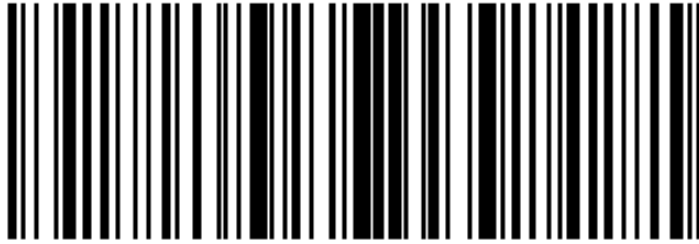

1. Enter Setup

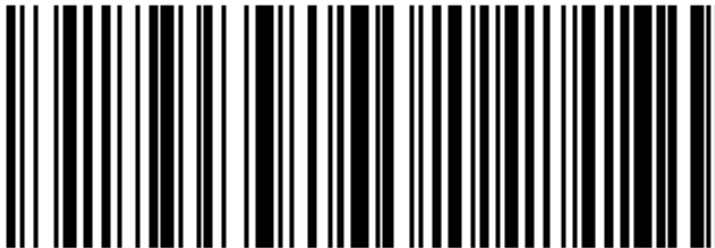

2. Bluetooth Pairing



3. Enable SPP Mode



4. Exit with Save

Instructions:

Here is how to pair the Inateck BCST-70 Scanner to your phone and to our apps:

1. Scan Enter setup.
2. Scan Enable SPP Mode
3. Scan Exit With Save
4. Scan Enter Setup
5. Scan Bluetooth Pairing
6. On the phone/tablet: Go to settings>connections>Bluetooth and find the Scanner (will be listed as "Inateck BCST-70-model number – SPP" or "Inateck BCST-70-model number" And pair the device.
7. Scan Exit with Save

You should be paired now! If you have any questions about this pairing process, please contact EZSupport via chat bubble on ez.delivery or by phone 419-747-0100.

For Troubleshooting or issues with the scanner, you can reach out to us by the methods above or to the manufacturer. Inateck's support: support@inateck.com.